


# 无线游戏手柄

Wireless Gaming Controller

AL-Q10

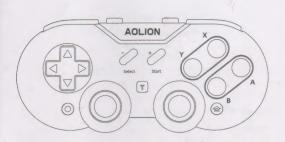


## 使用说明

User Manual ユーザーマニュアル



## **Product Schematic:**

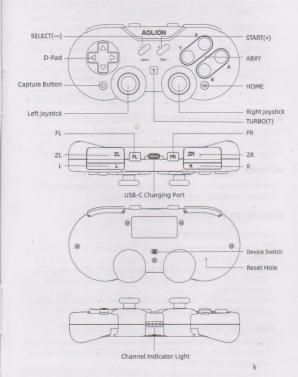

## Support

Platform	System	Connection Method	Mode
SWITCH		ВТ	
PC	Windows 7/ 8/10/11	USB	XINPUT DINPUT PC-SWITCH
Android	Android4.2+	BT	Android HID
105	iOS13.3+	BT	MFI Class Games

#### Controller Power On/Off / Reconnect

Power On/Reconnection: Press the HOME button to power on the controller and enter reconnection search mode.

Power Off: Long press the HOME button for 5 seconds to power off.

## Device Switching

Use the device switch on the back of the controller to quickly switch between connected device platforms and modes.

## Using on SWITCH Platform

#### Bluetooth Connection to SWITCH

- On the SWITCH main interface, click [Controller] → [ Change Grip/Order];
- With the controller powered off, long press the HOME button for 3 seconds, the channel indicator light will flash rapidly to indicate pairing mode;
- After 3-5 seconds, the corresponding channel indicator light will s tay on, indicating a successful connection.

## Waking up the SWITCH Console with the Controller

- In Bluetooth connection mode, when the SWITCH console enters sleep mode, press the [HOME] button on the controller to reconnect and wake up the SWITCH console;
- If the controller fails to wake up the SWITCH console, manual wake-up of the console should be selected.


#### Wired Connection to SWITCH

- On the SWITCH main interface, click: Settings → Controllers and Sensors → Wired Connection for Pro Controllers → Turn On;
- With the controller powered off, use an OTG adapter and data cable to connect the controller to the console;
- 3. The corresponding channel indicator light on the controller will flash (stays on when fully charged), indicating a successful connection. Note: If using the SWITCH dock, connect the controller to the dock's USB port using a TYPE-C data cable.

## • Using on PC Platform

#### USB Wired Connection to PC

- Connect the controller to the PC's USB port using a USB data cable. Once connected successfully, it defaults to XINPUT mode;
- 2. XINPUT/DINPUT mode switching.

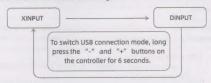

#### 3. PC-SWITCH Mode

With the controller powered off, press and hold the R3 (right stick pressed down) while connecting to the PC's USB port using a USB data cable.

Mode	Channel Indicator Light	Device Identifier
XINPUT	LED1+LED4	Xbox 360 Controller for Windows
DINPUT	LED2+LED3	Gamepad
PC-SWITCH	LED1+LED2+LED4	Pro Controller


#### Bluetooth Connection to PC

- 1. Open the computer's Bluetooth Add Device page;
- With the controller powered off, long press the [X] and [HOME] buttons for 3 seconds. Release when the channel indicator lights LED1 + LED4 are flashing quickly, entering pairing mode;
- Search for "Xbox wireless Controller" in the computer's Bluetooth settings to pair and connect successfully. The channel indicator lights LED1 + LED4 will remain on;
- 4. Device Identifier: Xbox wireless controller.

#### Bluetooth Connection to PC

Note: The receiver is a non-standard product. If the version you purchased does not come with a receiver, please skip the "Receiver Connection to PC" section.

- 1. Plug the receiver into the USB port of the PC:
- With the controller powered off, long press the HOME button. The channel indicator lights will flash in a running light pattern, entering pairing mode;
- Once connected successfully, the channel indicator lights LED2 + LED3 + LED4 will remain on;
- 4. PC mode switching.

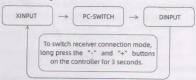

Mode	Channel Indicator Light	Device Identifier
XINPUT	LED2+LED3+LED4	Xbox 360 Controller for Windows
DINPUT	LED1+LED3+LED4	Gamepad
PC-SWITCH	LED1	Pro Controller

## Using on Android Platform

#### Bluetooth Connection

- With the controller powered off, long press the [A] and [HOME] butt ons for 3 seconds. Release when the channel indicator lights LED2 + LED3 are flashing quickly, entering pairing mode;
- Open the Bluetooth search on the Android device for "Gamepad" to pair.
   Once connected successfully, the channel indicator lights LED2 + LED3 will remain on;
- If the Bluetooth pairing connection is unsuccessful, the Bluetooth pairing mode will automatically turn off after approximately 2 minutes and 30 seconds, entering sleep mode.

## Using on iOS Platform

#### Bluetooth Connection

- With the controller powered off, long press the [X] and [HOME] butt ons for 3 seconds. Release when the channel indicator lights LED1 + LED4 are flashing quickly, entering pairing mode;
- Open the Bluetooth search on the iOS device for "Xbox wireless Controller " to pair. Once connected successfully, the channel indicator lights LED1 + LED4 will remain on;
- If the Bluetooth pairing connection is unsuccessful, the Bluetooth pairing mode will automatically turn off after approximately 2 minutes and 30 seconds, entering sleep mode.


#### Cooperative Control Mode

Requires two controllers of the same model to achieve cooperative control function.

- To turn on/off cooperative control mode: Press and hold [X], [L], and [R] simultaneously for 2 seconds:
- 2. Successful switch: Controller LED1 + LED2 LED3 + LED4 stay lit;
- In cooperative control mode, [Controller A] can control the character of [Controller B] in the game, while the functions of [Controller B] are retained.


#### ABXY button Swap Function

In the powered-on state, press and hold <code>[B]</code>, <code>[-]</code>, and <code>[+]</code> for 1 second to swap the ABXY button values according to XBOX layout and NS layout.

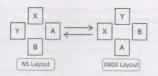

## Joystick Edge Switching

In the powered-on state, press and hold <code>[T]</code> and <code>[Capture button]</code> for 2 seconds to switch the joystick edge between circular/square. The default joystick edge is circular.

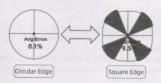

## D-Pad and Left Joystick Swap Function

In the powered-on state, press and hold [L3], [-], and [+] for 1 second to swap the left joystick and D-pad button values. PS: After swapping, fighting games or games requiring clear commands are better controlled using the D-pad.




## Motion Mapping Joystick

Motion mapping	Motion mapping for left joystick	Press and hold (+) and (L3) for 3 seconds
on/off	Motion mapping for right joystick	Press and hold [+] and [R3] for 3 seconds
Axis inversion	X-axis inversion	Press and hold [+] and [X] for 1 second
switch	Y-axis inversion	Press and hold [+] and [Y] for 1 second
-	Increase X-axis sensitivity	(+) and [D-Pad Right]
	Decrease X-axis sensitivity	[+] and [D-Pad Left]
Motion sensitivity adjustment	Increase Y-axis sensitivity	[+] and [D-Pad Up]
	Decrease Y-axis sensitivity	[+] and [D-Pad Down]
	Sensitivity 5 levels: 2	0-40-60-80-100 (default is 80)

#### TURBO Function Settings

- 1. Function buttons that can be set: A, B, X, Y, R, L, ZR, ZL, R3, L3, D-Pad;
- 2. Press and hold [Function button] and [T] button to set the function button for rapid fire.

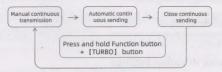

#### TURBO Clear

Press and hold [T] button for 5 seconds to cancel all function button rapid fire functions.

#### TURBO continuous speed gear adjustment

The rapid fire rate settings are: Slow (8 times/second) -- Medium

(16 times/second) -- Fast (21 times/second), with three settings in total.

The rate of consecutive "T" and "+" increases

The rate of consecutive transmission of "T" and "-" slows down

## Macro Programming Settings

#### Macro action buttons can be set for:

Left joystick, right joystick, A, B, X, Y, L, ZL, R, ZR, L3, R3, D-pad, -, +

#### Steps for Macro Programming Setup

- Press and hold [T] and [FL] / [FR] buttons for 2 seconds; the channel indicator lights LED2 + LED3 will light up, entering the macro definition programming function.
- Press the function button you want to map, such as B, X, Y, L, ZL, ZR. After input is complete, press [FL] / [FR] to exit programming mode; the LED lights will return to the channel indicator state, ending macro prog ramming.
- 3. Pressing [FL] / [FR] can trigger the programmed action.
- 4. A single programming can map up to 32 function buttons.

#### Macro Programming Clear

Press and hold <code>[T]</code> and <code>[FL]</code> / <code>[FR]</code> buttons for 2 seconds; the channel indicator lights LED2 + LED3 will light up. Press the programming button you want to clear, <code>[FL]</code> / <code>[FR]</code>, to successfully clear the programming button.

#### Macro Programming Reset

Long press [T] and [-] buttons for 5 seconds to restore default macro programming buttons.

Factory default programming buttons: [FL] = D-pad left, [FR] = D-pad right.

### Motor Vibration Settings

1. Vibration has four settings: Off, Weak, Medium, Strong. Default setting: Medium.

To adjust the vibration level: Press and hold [T] without releasing, then move [left joystick up/down] to adjust the vibration.

Weak vibration: Channel indicator light LED1 flashes once for low vibration.

Medium vibration: Channel indicator lights LED1 + LED2 flash once for medium vibration.

Strong vibration: Channel indicator lights LED1 + LED2 + LED3 flash once for strong vibration.

Off vibration: Channel indicator lights LED1 + LED2 + LED3 + LED4 flash once for no vibration.

#### Charging Function

## Charging Indicator

- 1 When charging with the controller off. All channel indicator lights flash slowly together, after fully charged all channel indicator lights turn off.
- When the controller | s | n working status: The current mode channel indicator lights flash stowly; after fully charged, the channel indicator lights remain on.

#### Charging Power

Standard USB 5V voltage can use mobile phone chargers, computers, or other USB ports to charge the controller. Full charge time is approximately 3 hours; fast charging heads can be used.

#### Low Battery Alarm

When the controller battery level is below 20%, the current connection channel light will flash.

#### Sleep Function

- 1 Manual Sleep: Long press the (HOME) button for 5 seconds to disconnect Bluetooth and enter sleep shutdown mode.
- When the controller is in the initial pairing state, it will enter sleep mode after 2 minutes and 30 seconds of no connection.
- 3 When the controller is in working status, it will enter sleep mode after 5 minutes of no button or joystick movement.
- 4 In sleep mode, pressing the HOME button on the controller will reconnect and wake up the SWITCH console.

#### Controller Calibration Function

When the controller has joystick/body sensing issues, calibration can be performed.

1 In the powered-on state, long press [X] [1], and [+] for 1 second the controller channel indicator lights LED1 + LED2 will alternate flashing to enter calibration mode.

- 2. Rotate the left joystick and right joystick a maximum of 2-3 circles.
  3. After placing the controller on a level surface, press [+] to complete calibration.
- Reset Function

When the controller experiences functional confusion, freezing, or other abnormalities, press the reset hole switch on the back of the controller to perform a reset operation; after resetting, reconnect and pair again.

#### **Restore Settings**

Long press the [T] button for 10 seconds to restore the controller settings; after resetting, TURBO, vibration, and macro programming will return to default settings.

#### Precautions

- 1. Unplug the power plug when the product is not in use
- 2. This product should not be used or stored in a humid environment
- When using or storing this product, avoid dust and heavy pressure as much as possible to prevent affecting its lifespan.
- 4. If the product is damaged due to improper use, such as being submerged, collided, or dropped, and electrical performance issues arise, please stop using it.
- 5. Do not use external heating devices like microwaves to dry it.
- If damaged, please send it to the maintenance department for handling and do not disassemble it yourself.
- 7. Do not allow children to play with this product.

## Product Specifications


Product Model	AL-Q10	
Product Name	W reless Game Controller	
Working Power Supply	500mAh Lithium Battery	
Charging Current	240mA	
Product Dimensions	Approximately 142*65*37mm	
Product Weight	Approximately 105g	
Working Temperature	5~45°C	
Storage Humidity	20~80%	



# 无线游戏手柄

Wireless Gaming Controller


AL-Q10

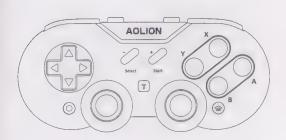

## 使用说明

User Manual ユーザーマニュアル

## 产品示意图:

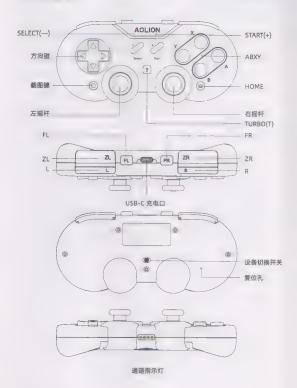

## ●支持

平台	系统	连接方式	模式
SWITCH		ВТ	
PC	Windows 7/ 8/10/11	USB	XINPUT模式 DINPUT模式 PC-SWITCH模式
Android	Android4.2+	ВТ	Android HID
105	ıOS13 3+	BT	MFI美游戏

## ● 手柄开关机/回连

开机/回连:按下HOME键手柄开机,进入回连搜索模式。

关机: 长按HOME键5秒 关机。

## ● 设备切换

通过手柄背面【设备切换开关】,可快速切换回连已连接的设备平台及模式。

## ● SWITCH平台使用

#### 蓝牙方式连接SWITCH

- 1、在SWITCH主界面点击【手柄】→【更改握法/顺序】;
- 2、手柄关机状态下,手柄长按HOME键3秒,手柄通道指示灯跑马式快闪,进入配对状态:
- 3、3~5秒后, 手柄相应通道指示灯常亮, 表示连接成功。

#### 手柄 降醒 SWITCH 主机

- 1、手柄蓝牙连接模式下, SWITCH主机进入休眠模式时, 按一下手柄 [HOME] 键即可回连唤醒SWITCH主机;
- 2、若手柄唤醒SWITCH主机失败,应选择手动唤醒主机。

#### 有线方式连接SWITCH

- 1、在SWITCH主界面点击:设置→手柄与感应器→专业手柄的有线连接→开启;
- 2、手柄关机状态下用OTG转换头和数据线连接手柄与主机;
- 3、手柄相应通道指示灯闪烁(手柄满电时常亮),手柄连接成功。 备注:如使用SWITCH底座,使用TYPE-C数据线连接手柄和底座USB接口。

## ● PC平台使用

#### USB有线方式连接PC

- 1. 手柄通过USB数据线连接PC电脑USB接口,连接成功 默认为XINPUT模式;
- 2. XINPUT/DINPUT模式切换。



#### 3. PC-SWITCH模式

手柄关机状态下,按住手柄R3(右摇杆下压),通过USB数据线连接PC电 脑USB接口。

模式	通道指示灯	设备标识符
XINPUT	LED1+LED4	Xbox 360 Controller for Windows
DINPUT	LED2+LED3	Gamepad
PC-SWITCH	LED1+LED2+LED4	Pro Controller


#### 蓝牙方式连接PC

- 1、打开电脑蓝牙-添加设备页面;
- 2、手柄关机状态下,长按手柄【X】和【HOME】 3秒,通道指示灯 LED1+LED4快闪时松开手,进入配对状态;
- 3、在电脑蓝牙设置界面搜索; Xbox wireless Controller进行配对连接连接成功,通道指示灯LED1+LED4常亮;
- 4、设备标识符: Xbox wireless Controller。

#### 接收器方式连接PC

注:接收器为非标品,如果您购买的版本没有配备接收器,请跳过《接收器方式连接PC》部分说明。

- 1、将接收器插在 PC 电脑的 USB 接口;
- 2、手柄关机状态下,长按 HOME 键,手柄通道指示灯跑马式快闪,进入配对状态;
- 3、连接成功,手柄通道指示灯 LED2+LED3+LED4 常亮;
- 4、PC 模式切换。

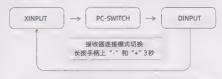

模式	通道指示灯	设备标识符
XINPUT	LED2+LED3+LED4	Xbox 360 Controller for Windows
DINPUT	LED1+LED3+LED4	Gamepad
PC-SWITCH	LED1	Pro Controller

## ● Android平台使用

#### 蓝牙方式连接

- 1、手柄关机状态下,长按手柄(A)和(HOME)3秒,通道指示灯 LED2+LED3快闪时松开手,手柄进行配对;
- 2、打开Android设备蓝牙搜索【Gamepad】进行配对,连接成功后,通道指示灯LED2+LED3常亮;
- 3、若蓝牙配对连接不成功,约2分30秒后自动关闭蓝牙配对模式,进入休眠。

#### ● iOS平台使用

#### 蓝牙方式连接

- 1、手柄关机状态下,长按手柄【X】和【HOME】3秒,通道指示灯 LED1+LED4快闪时松开手,手柄进行配对;
- 2、打开iOS设备蓝牙搜索【Xbox wireless Controller】进行配对,连接成功后,通道指示灯LED1+LED4常亮;
- 3、若蓝牙配对连接不成功,约2分30秒后自动关闭蓝牙配对模式,进入休眠。


#### ● 协控模式

#### 需同型号两支手柄可实现协控功能

- 1、协控模式开启/关闭 同时按住 [X] 和 [L] 和 [R] 2秒;
- 2、切换成功 手柄LED1+LED2+\_ED3+LED4 常亮:
- 3、协控模式下, 【手柄A】可控制【手柄B】游戏中的人物, 【手柄B】功能保留。


#### ● ABXY键值互换功能

手柄开机状态下,手柄长按 [8] 和 [-] 和 [+] 1秒 手柄ABXY键值可按 XBOX布局键值和NS布局键值互换。

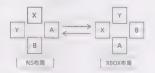

#### ● 摇杆边际切换

开机状态下,长按【T】和【截屏键】 2秒 ,手柄摇杆边际可切换圆形/方形。 摇杆边际默认为圆形。

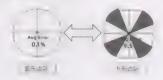

#### ● 十字键与左摇杆互换功能

手柄开机状态下,手柄长按【L3】和【 】和【+】1秒 ,手柄左摇杆与方向键键值互换。

PS: 互换后格斗类或者需要指令清晰的游戏 通过 +字键操控体验更佳



## ● 体感映射摇杆

体感映射开启/关闭	体感映射为左摇杆	长按【+】和【L3】3秒
体感映射并后/大闭	体感映射为右摇杆	长按 [+] 和 [R3] 3秒
轴 反转切换	X轴反转	长按 [+] 和 [X] 1秒
	Y轴反转	长按[+]和[Y]1秒
	X轴灵敏度增加	【+】和【十字键右】
	X轴灵敏度降低	【+】和【十字键左】
体感灵敏度调节	Y轴灵敏度增加	[+]和[十字键上]
	Y铀灵敏度降低	[+] 和【十字键下】
	灵敏度5档: 20-40	0-60-80 100 (默认为80)

## ● TURBO功能设置

- 1、可设置功能键:A、B、X、Y、R、L、ZR、ZL、R3、L3、十字方向键;
- 2、按住 [功能键] 和 [T] 键, 可将功能键设置连发。



#### TURBO清空

长按【T】键5秒后,取消所有功能键连发功能。

#### TURBO连发速率档位调节

连发速率为:慢(8次/秒)--中(16次/秒)--快(21次/秒)共三档设置

"T" 和 "+" 连发速率增加 "T" 和 "-" 连发速率减慢

## ● 宏编程设置

#### 可设置宏动作键

左摇杆、右摇杆、A、B、X、Y、L、ZL、R、ZR、L3、R3、十字键、-、+

#### 宏编程设置步骤

- 按住 [T] 和 [FL] / [FR] 键2秒,通道指示灯LED2+LED3灯亮,进入宏定义编程功能;
- 2、按下需要映射的功能键,如B、X、Y、L、ZL、ZR,输入完成按下【FL】/ 【FR】退出编程设置模式,LED灯恢复通道指示灯状态,宏编程结束;
- 3、按下 [FL] / [FR] 时可触发 编程后的动作;
- 4、宏编程的功能键,一次编程可映射32个功能键。

#### 宏编程清除

按住 [T] 和 [FL] / [FR] 键2秒,通道指示灯LED2+LED3灯亮,按一下需要 清除的编程键 [FL] / [FR] ,编程键清除成功。

#### 宏编程复位

长按【T】和【-】键5秒恢复默认宏编程按键。

编程键出厂默认: 【FL】=十字键左键、【FR】=十字键右键

## ● 马达震动设置

- 1、震动四挡设置:关、弱、中、强。默认设置:中
- 2、震动档位设置:按住【T】键不松开,拨动【左摇杆上/下】调节振动。 弱震动时:通道指示YTLED1 闪一次 低震动。

中震动时:通道指示灯LED1+LED2闪一次中震动。

强震动时:通道指示灯LED1+LED2+LED3 闪一次 强震动。

关需动时:通道指示灯LED1+LED2+LED3+LED4闪一次 无需动。

## ● 充电功能

#### 充电指示

- 1、手柄关机下充电时:通道指示灯全灯同时慢闪,充满电后通道指示灯全灯熄灭;
- 手柄工作状态下: 当前模式下通道指示灯慢闪,充满电后通道指示灯常 膏。

#### 充电电源

标准USB 5V电压,可使用手机充电器、电脑等USB接口为手柄充电。手柄充满电时间约为3个小时,可使用快充头充电。

#### 低电报警

当手柄电池电量低于20%电量时,当前连接通道灯闪烁。

## ● 休眠功能

- 1、手动休眠:长按【HOME】键5秒后蓝牙断升连接进入休眠关机状态;
- 2、手柄在首次配对状态下, 2分30秒无连接进入休眠状态;
- 3、手柄在工作状态下,5分钟后无任何按键、轴动作手柄进入休眠;
- 4、在睡眠状态下,按下手柄HOME键即可回连唤醒SWITCH主机。

## ● 手柄校准功能

当手柄出现摇杆/体感异常时,可进行校准操作

- 1、手柄开机状态下,长按 [X] 和 [-] 和 [+] 1秒,手柄通道指示灯LED1+LED2交替闪烁亮灯讲入校准状态;
- 2、手柄左摇杆和右摇杆最大旋转2~3圈;
- 3、手柄放置在水平桌面后,按【+】完成校准。

## ● 复位功能

当手柄出现功能错乱、死机或者其它异常时,按下手柄背面复位孔开关,进 行复位操作,复位后重新配对连接。

## 恢复设置

长按【T】键10秒,恢复手柄设置,复位后TURBO,震动,宏编程 恢复默认设置

## ● 注意事项

本产品在不使用时,放置保存好。

本产品不能在潮湿的环境里使用、存放。

本产品在使用或存放时,应尽量避开灰尘、重压,以免影响使用寿命。

本产品因使用不当而造成浸水、撞坏或摔坏,出现电气性能问题,请停止使用。

不要用微波炉等外部加热设备对其进行干燥处理。

如有损坏请及时送维修部门处理, 切勿自行拆卸。

不要给儿童玩弄本产品。

## ● 产品规格

产品型号	AL Q10	
产品名称	无线游戏手柄	
工作电源	500mAh锂电池	
充电电流	240mA	
产品尺寸	\$9142*65*37mm	
是重品产	约105g	
工作温度	5~45°C	
诸存湿度	20~80%	

## 产品保修卡

退货 换货 (如需退换货,请填写以下表格随商品一同寄出)

产品型号	产品名称	
购买日期	购买方式	
联系人	联系电话	
联系地址		
退货原因		
备注		

#### ● 保修条款

- 产品自售出之日起,实行7天无理由退换,3个月免费保修,保修期过后按成本价有偿维修。
- 人为及不可抗力因素损坏的产品,不在修范围之内。
- 未按说明书操作,自行拆装产品的不予更换和保修。
- 本卡作为保修依据,保修时需提供,请注意保留。
- 本卡公司保留对所有内容的修改权和解释权。

## ● 寄修服务

 当您购买的AOLION澳加辦产品出现问题时,如遇到没有时间或者不方便 到现场维修的情况,请不用担心AOLION澳加狮 寄修服务帮您实现足不出 户就完成产品维修。



官方微信

## 合格证

检验品:

检验结论 产品经检验合格准予出厂

官方微博:aolion澳加狮 官方网站(中文): www.aoliongame.com官方网站(英文): www.gamesfavor.com

公司地址:广东省深圳市宝安区西乡三围华丰第一科技园A区一栋4楼



# 无线游戏手柄

Wireless Gaming Controller


AL-Q10



## 使用说明

User Manual ユーザーマニュアル

## 製品示意図

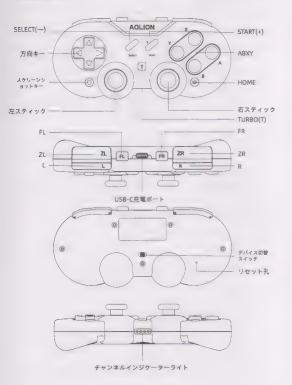

#### ●サポート

プラットフォーム	システム	接続方法	モード
SWITCH		BT	
PC	Windows 7/ 8/10/11	USB	XINPUT DINPUT PC-SWITCH
Android	Android4,2+	BT	Android HID
ios	iOS13.3+	BT	MFIクラスゲーム

#### ●コントローラーの電源オン/再接続

電源オン/再接続: HOMEキーを押してコントローラーの電源を入れ、 再接続検索モードに入ります。

電源オフ HOMEキーを5秒間長押しして電源を切ります。

## ●デバイス切替

コントローラー背面の【デバイス切替スイッチ】を使って、迅速に再接続 されたデバイスブラットフォームとモードを切り替えできます。

## ●SWITCHプラットフォーム使用

#### Bluetooth方式でSWITCHに接続

- SWITCHのメイン画面で【コントロ・ラー】→【握り方/順序を変更】 をクリック。
- 2、コントローラーがオフの状態で、HOMEキーを3秒間長押しすると、 コントローラ のチャンネルインジケーターライトが点滅し、ベアリン グ状態に入ります;
- 3、3~5秒後、コントローラーの対応チャンネルインジケーターライトが常時点灯し、接続成功を示します。

#### コントローラーでSWITCH本体を起動

- コントローラーがBluetooth接続モードのとき、SWITCH本体がスリーブ モードに入ると、コントローラーの [HOME] キーを一回押すことで SWITCH本体が再接続されて起動します;
- 2、コントローラーでSWITCH本体を起動できない場合は、手動で本体を起動してください。


## 有線方式でSWITCHに接続

- SWITCHのメイン画面で: 設定→コントローラーとセンサー→プロコントローラーの有線接続→オン;
- 2、コントローラーがオフの状態でOTG変換アダプターとデータケーブルを使って コントローラーと本体を接続;
- 3、コントロラの対応チャンネルインジケーターライトが点滅(コントローラーが満充電のときは常時点灯)、コントローラーの接続成功。
- 備考: SWITCHドックを使用する場合は、TYPE-Cデータケーブルを使用してコント ローラーとドックのUSBポートを接続してくたさい。

## ● PCプラットフォーム使用

#### USB有線接続PC

- コントローラーをUSBデ タケ ブルでPCのUSBボートに接続し、接続が 成功するとデフォルトでXINPUTモードになります;
- 2. XINPUT/DINPUTキードの切り替え.

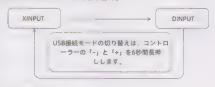

#### 3. PC-SWITCHモード

コントローラーがオフの状態で、コントローラーのR3(右スティックを押す) を押しながら、USBデータケーブルでPCのUSBポートに接続します。

モード	チャネルインジケーター	デバイス識別子
XINPUT	LED1+LED4	Xbox 360 Controller for Windows
DINPUT	LED2+LED3	Gamepad
PC-SWITCH	LED1+LED2+LED4	Pro Controller

#### Bluetooth接続PC

- 1、PCのBluetoothを開き、デバイス追加ページに移動します;
- 2、コントローラーがオフの状態で、コントローラーの [X] と [HOME] を3秒間 長押しし、チャネルインジケーターLED1+LED4が高速点減したら手を離し、ベ アリングモードに入ります:
- PCのBluetooth設定画面で「Xbox wireless Controller」を検索してペアリング接続し、接続が成功するとチャネルインジケーターLED1+LED4が点灯します;
- 4. デバイス識別子: Xbox wireless controller。

#### レシーバー接続PC

注: レシーバーは非標準品です。購入したバージョンにレシーバーが付属していない場合は、「レシーバ 接続PC」の説明をスキップしてください。

- 1、レシーパーをPCのUSBポートに接続します:
- コントローラーがオフの状態で、HOMEボタンを長押しし、コントローラーの チャネルインジケーターかマラソン式、高速点滅するとペアリングモードに入ります。
- 3、接続か成功すると、コントローラ のチャネルインジケ タ LED2+LED3+LED4が点灯 します:
- 4、PCモードの切り替え。



モード	チャネルインジケーター	デバイス識別子
XINPUT	LED2+LED3+LED4	Xbox 360 Controller for Windows
DINPUT	LED1+LED3+LED4	Gamepad
PC-SWITCH	LED1	Pro Controller

## ● Androidプラットフォーム

Bluetooth接続

- コントローラーがオフの状態で、コントローラーの【A】と【HOME】を3秒 間長押しし、チャネルインジケーターLED2+LED3が高速点滅したら手を難し コントローラーがペアリングします:
- AndroidデバイスのBluetoothを開き、「Gamepad」を検索してペアリングし、接続が成功するとチャネルインジケーターLED2+LED3が点灯します;
- 3、Bluetoothベアリング接続か成功しなかった場合、約2分30秒後に自動的に Bluetoothベアリングモードがオフになり、スリーブ状態に入ります。

#### ● iOSプラットフォーム

#### Bluetooth接続

- 1、コントローラーがオフの状態で、コントローラーの [X] と [HOME] を3秒 間長押しし、チャネルインジケータ LED1+LED4が高速点滅したら手を離し、 コントローラーがペアリングします:
- 105デバイスのBluetoothを開き、「Xbox w reless Controller」を検索して ペアリングし、接続か成功するとチャネルインジケーターLED1+LED4が点灯 します;
- 3、Bluetoothペアリング接続が成功しなかった場合、約2分30秒後に自動的に Bluetoothペアリングモードがオフになり、スリーブ状態に入ります。


#### ● 協調モード

#### 同型の2つのコントローラーで協調機能を実現

- 1、協調モードのオン/オフ: 【X】と【L】と【R】を同時に2秒間押す;
- 2、切り替え成功 手元LED1+LED2LED3+LED4が常時点灯:
- 3、協調モードでは、【コントローラーA】が【コントローラーB】のゲーム内 キャラクターを制御でき、【コントローラーB】の機能は保持される。

#### ● ABXYキー値の入れ替え機能

コントローラーの電源オン状態で、コントローラーの [B] と [-] と [+] を 1秒間長押しすると、コントローラーのABXYキー値がXBOXレイアウトキー値 とNSレイアウトキー値に入れ替わる。

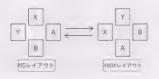

#### ●スティックのエッジ切り替え

電源オン状態で、【T】と【スクリ ンショットキー】を2秒間長押しすると、コントローラーのスティックのエッジが円形/四角形に切り替わる。スティックのエッジはデフォルトで円形。



#### ● 十字キーと左スティックの入れ替え機能

コントローラーの電源オン状態で、コントローラーの [L3] と [-] と [+] を1秒間長押しすると、コントローラーの左スティックと方向キーのキー値が入れ替わる。

PS: 人れ替え後、格闘系や指示が明確なゲームでは十字キーでの操作体験が向上する。



#### ● 体感マッピングスティック

体感マッピングの オン/オフ	体感マッピングは左ステ イックに設定	[+] と [L3] を3秒間長押し
	体感マッピングは右ステ ィックに設定	[+]と [R3] を3秒間長押し
軸の反転切り替え	X軸反転	【+】と【X】を1秒間長押し
	Y軸反転	【+】と【Y】を1秒間長押し
体感感度調整	X軸感度增加	[+] と[十字キー右]
	X軸感度減少	[+] と [十字キー左]
	Y軸感度增加	[+] と[十字キー上]
	Y輕感度減少	[+] と [十字キー下]
	感度は5段階: 20-40 60-80-100 (デフォルトは80)	

## ● TURBO機能設定

- 1、設定可能な機能キー: A、B、X、Y、R、L、ZR、ZL、R3、L3、十字方向キー;
- 2、【機能キー】と【T】キーを押し続けると、機能キーを連射設定できる。



#### TURBOクリア

【T】キーを5秒間長押しすると、すべての機能キーの連射機能がキャンセルされる。

## TURBO連発速率調整

連発速率は:遅い(8回/秒)--中(16回/秒)--速い(21回/秒)の3段階設定

「T」と「+」で連発速率を増加

「T」と「」で連発速率を減少

#### ● マクロプログラミング設定

#### マクロアクションキーを設定可能

左スティック、右スティック、A、B、X、Y、L、ZL、R、ZR、L3、R3、十字キー、-、+

## マクロプログラミング設定手順

- [T] と [FL] / [FR] キーを2秒間押し続けると、チャンネルインジケーターLED2+LED3が点灯し、マクロ定義プログラミング機能に入る;
- マッピングする必要のある機能キー(例:B, X, Y, L, ZL, ZR)を押し、入 力が完了したら [FL] / [FR] を押してプログラミング設定モードを終了、L EDIはチャンネルインジケーターの状態に戻り、マクロプログラミングが終了;
- 3、 [FL] / [FR] を押すと、プログラミングされたアクションをトリガーできる;
- 4、マクロプログラミングの機能キーは、一度のプログラミングで32個の機能キーをマッピング可能。

#### マクロプログラミングのクリア

【T】と【FL】/【FR】キーを2秒間押し続け、チャンネルインジケーターLED2 +LED3が点灯したら、クリアしたいプログラミングキー【FL】/【FR】を1回押 すと、プログラミングキーがクリア成功。

#### マクロプログラミングのリセット

[T] と [-] キーを5秒間長押しすると、デフォルトのマクロプログラミングキーに戻る。

プログラミングキーの出荷時デフォルト: [FL] =十字キー左、[FR] =十字キ 一右

#### ● モーター振動設定

- 1、振動の4段階設定:オフ、弱、中、強。デフォルト設定:中
- 2、振動段階設定: [T] キーを押し続け、 [左スティック 上/下] で振動を調整。 弱振動時: チャンネルインジケーターLED1が1回点滅、低振動。

中振動時・チャンネルインジケーターLED1+LED2が1回点滅、中振動。

強振動時、チャンネルインジケーターLED1+LED2+LED3が1回点滅、強振動。 振動オフ時: チャンネルインジケーターLED1+LED2+LED3+LED4が1回点滅、 無振動。

#### ● 充電機能

#### 充電インジケーター

- コントローラーがオフの状態で充電すると: チャンネルインジケーターが全灯同時に ゆっくり点滅、充電完了後は全灯消灯;
- 2、コントローラーが動作状態の時:現在のモードでチャンネルインジケーターがゆっくり点滅、充電完了後はチャンネルインジケーターが常時点灯。

#### 充電電源

標準USB 5V電圧、スマートフォンの充電器やパソコンなどのUSBポートを使用してコントローラーを充電可能。コントローラーの充電完了時間は約3時間で、急速充電器を使用して充電可能。

#### 低電圧警告

コントローラーのパッテリー残量が20%未満になると、現在接続されているチャンネルのランプが点滅。

## ●スリープ機能

- 1、手動スリーブ: (HOME)キーを5秒間長押しするとBluetoothが切断され、スリープオ フ状態に入る;
- コントローラーが初回ペアリング状態の時、2分30秒無接続でスリーブ状態に入る;
- 3、コントローラーが動作状態の時、5分後に何のキーや軸の動作もないとコントローラーがスリーブに入る;
- 4、スリーブ状態でコントローラーのHOMEキーを押すとSWITCH本体に再接続して復帰。

## ● コントローラーキャリブレーション機能

コントローラーのスティック/モーションに異常がある時、キャリブレーション操作を行うことができる。

- 1、コントローラーの電源オン状態で、 [X] と [-] と [+] を1秒間長押しすると、コントローラーのチャンネルインジケーターLED1+LED2が交互に点滅してキャリブレーション状態に入る;
- 2、コントローラーの左スティックと右スティックを最大で2~3回転させる:
- コントローラーを水平なテーブルに置いた後、[+]を押してキャリブレーションを 完了。

#### ●リセット機能

コントローラーに機能の乱れ、フリーズまたはその他の異常が発生した場合、コントローラー背面のリセット穴スイッチを押してリセット操作を行い、リセット後に再ベアリング雑続。

#### 設定を復元

【T】キーを10秒間長押しすると、コントローラーの設定を復元し、リセット後にTURBO、振動、マクロプログラミングがデフォルト設定に戻る。

#### ● 注意事項

- 1、本製品は使用しない時は電源プラグを抜いてください。
- 2. 本製品は湿気のある環境で使用・保管しないでください。
- 3、本製品は使用または保管時に、できるだけほこりや重圧を避けてください。使用寿命に影響を与える可能性があります。
- 4、本製品を不適切に使用したことによる浸水、衝撃または破損があり、電気的性能に 問題が発生した場合は、使用を中止してください。
- 5、電子レンジなどの外部加熱装置で乾燥処理しないでください。
- 6、損傷がある場合は、速やかに修理部門に持ち込んでください。自己分解は絶対にしないでください。
- 7、子供に本製品を触らせないでください。

## ● 製品仕様

製品モデル	AL-Q10
製品名	ワイヤレスゲームコントローラー
動作電源	500mAhリチウムバッテリー
充電電流	240mA
製品サイズ	約142*65*37mm
製品重量	約105g
動作温度	5~45°C
保管湿度	20~80%



